Operating instructions



Ersa soldering station

i-CON1 MK2



Contents

1.	For y	our saf	əty		5
	1.1	Intende	ed use		6
	1.2	Nationa	al and interna	ational regulations	8
2.	Tech	nical da	ta		9
3.	Tran	sport, si	orage and c	lisposal	11
4.	Com	mission	ing		12
	4.1	Before	starting oper	ation	12
	4.2	Switchi	ng on for the	first time	13
5.	Fund	tional d	escription		14
	5.1	Operat	ion		14
	5.2	The W	ork mode		15
		5.2.1	Setting tem	perature setting of the optional heating plate	16
		5.2.2	Working wit	th the optional heating plate	17
			5.2.2.1	Output values of the heating plate	18
		5.2.3	Working wit	th two fixed temperatures (nominal temperatures)	19
	5.3	Param	eter mode		20
		5.3.1	i-SET TOO	L	22
		5.3.2	Set tempera	ature	23
			5.3.2.1	Setting two nominal temperatures (fixed temperatures)	23
		5.3.3	Calibration	temperature	24

\land kurtz ersa

Contents

	5.3.4	Tip offset		
	5.3.5	i-CON 1 (Calibrating	25
	5.3.6	Calibratio	on temperature	
	5.3.7	Power Le	vel	
	5.3.8	Standby-	Time	27
	5.3.9	Standby-	Temperature	27
5.4	Configu	uration mo	de	
	5.4.1	Temperat	ure window	
	5.4.2	Process a	alarm	
	5.4.3	Password	d lock	30
		5.4.3.1	Setting the password	30
		5.4.3.2	Changing the password	32
		5.4.3.3	Input of values without deactivating the password	32
		5.4.3.4	Forgotten password	33
	5.4.4	Temperat	ure unit	33
	5.4.5	Language	e selection	33
	5.4.6	Adjustabl	e shut-down function (idle state)	34
	5.4.7	Device nu	umber	35
	5.4.8	Heating p	plate (option)	
		5.4.8.1	Connecting heating plate to soldering station	36
		5.4.8.2	Activating the heating plate	

\land kurtz ersa

Contents

		5.4.9	Two fixed	temperatures	. 37
			5.4.9.1	Activating function	. 37
	5.5	Factory	/ settings ("	default")	. 38
	5.6	Contra	st		. 39
	5.7	Replac	ing the solo	lering tip	. 40
	5.8	Changi	ng the Hea	ting Element	. 42
	5.9	Sensitiv	ve compon	ents	. 43
6.	Error	diagno	sis and re	medy	. 44
	6.1	Error N	lessages		. 45
7.	Main	tenance			. 46
	7.1	Importa	ant care job	s	. 46
	7.2	Cleanir	ıg		. 46
8.	Repla	acemen	t parts, aco	cessories	. 47
	8.1	Solderi	ng tips of S	eries 142	. 49
9.	Warra	anty			. 50



1. For your safety

Ersa products are developed, produced and tested in compliance with the basic safety requirements.

Nevertheless, residual risks still exist!

For this reason, please read these operating instructions before you operate your device for the first time. It helps you to become familiar with the device's functions and to use them optimally. Please store these operating instructions at a place which is always accessible to all users!



1.1 Intended use

Ersa heating tools may only be used for the processing of soft solder. In special cases, however, if stated explicitly in the operating manual of the respective tool, some tools can also be used to work plastics. If the tool is not used as intended or tampered with, the manufacturer cannot be held liable for any warranty and liability claims on part of the purchaser.



Attention! Check all components before use. Have any damaged parts repaired by a specialist or the manufacturer. Incorrectly performed repairs represent a risk of accidents for the user. Always use genuine Ersa spare parts for any repairs.



Attention! Heating tools get hot. Before heating up the device, check that the tool insert (e.g. soldering tip, modelling insert, etc.) is correctly connected to the heating tool. Do not allow the hot tool insert to touch your skin, your hair or any materials which are heat-sensitive and flammable. Always work on a base with adequate heat-resistant properties.



Attention! Restrict unauthorised access. Make sure that no unauthorized person, in particular children, can get near heating tool without your permission.



Attention! Danger of fire. Before heating up the heating tool, remove flammable objects, liquids and gases from the area where you will be working with your heating tool. Whenever you take a break from your work, place the heating tool in the holder provided for that purpose. Disconnect your heating tools from the mains after use.





Attention! Never leave your hot heating tool unattended. Remember that the tool insert needs a certain amount of time to cool down to a safe temperature even after you have switched the device off.



Caution! Keep your workplace tidy. An untidy workplace increases the risk of accidents.



Attention! Lead alloyed solders are toxic. Solders containing lead are toxic if they enter human body. For this reason, it is strictly forbidden to eat, drink or smoke. By equal measure, you should thoroughly wash your hands after working with lead alloyed solder.



Attention! Dispose of waste solder in a responsible fashion. Comply with your local authority's waste disposal regulations when disposing of the by-products of your soldering work.



Attention! Ventilation and extraction. The materials and ancillary substances you use whilst soldering can have a detrimental effect on your health. Make sure there is adequate ventilation or extraction. Comply with the relevant safety data sheets.





Warning! Protect connection cables. Do not use the connection cable to pull out the plug or as a means of carrying the device. Make sure that connection cables are not exposed to heat and do not come into contact with oil or sharp edges. Damaged connection cables represent a potential cause of fire, short-circuits and electric shocks. Damaged connecting cables can cause fire, short circuits, and electric shock, consequently they must be replaced immediately.



Attention! Take account of ambient conditions. Protect your device against all liquids and moisture. Failure to do this represents a risk of fire or electric shocks.



Caution! Look after your heating tool. Always keep your Ersa product in a safe, dry place out of the reach of children. Pay attention to any maintenance requirements. Check your device at regular intervals. Always use genuine Ersa accessories and spare parts.



Attention! Physically and/or mentally disabled people may only use the soldering station when supervised by trained expert personnel! Children are not allowed to play with the soldering station!

1.2 National and international regulations

Comply with national and international regulations governing health and safety at work.



Technical data

2. Technical data

Soldering station i-CON 1	Soldering station i-CON 1				
Description	Value	Unit			
Mains voltage	220-240	VAC			
Mains frequency	50-60	Hz			
Fuse (slow-blow)	0,8	A			
Mains voltage	110-120	VAC			
Mains frequency	50-60	Hz			
Fuse (slow-blow)	1,6	A			
Secondary voltage	24	VAC			
Maximum short-term heating power	150	W			
Mean heating power	80	W			
Safety class	1	-			
Permissable ambient temperature	0-40	°C			
Temperature range (stepless)	150-450	°C			
	300-842	°F			
Temperature regulation (at idle)	< ± 2	°C			
Ohmic resistance between soldering tip and ground	< 2	Ohm			
Soldering tip to ground leakage voltage	< 2	mV eff			
Other					
Control technology	SENSOTRON	IC (PID-behaviour)			
Function display		LC-Display, blue			
Supply line 2 m, PVC, with connector					
Single-knob control via incremental encoder (i-OP)					

Technical data

Soldering station i-CON 1				
Description Value Uni				
Anti-static surface, especially suitable for use in ESD areas. Option: Serial interface for controlling the EASY ARM soldering smoke extractor and the 0IRHP100A heating plate				
In accordance with MIL-SPEC/ESA-standard				
VDE*, EMV-tested				
Conformity CE				
Connectable soldering tool: i-TOOL				

Soldering iron i-TOOL					
Description	Value	Unit			
Operating Voltage	24	VAC			
Maximum heating power	150	W			
Mean heating power	80	W			
Weight (without supply line) approx. 30					
Other					
Supply line 1,2 m, highly flexible, heat resistant, antistatic					
Type: Antistatic in accordance to MIL-SPEC/ESA-Standard					
The handle features an integrated identification and standby function.					

The soldering station can optionally be delivered with a serial interface. Control signals for the soldering smoke extraction EASY ARM are also available on this interface.

*A public safety testing company located in Germany. Similar in operation to its United States counterpart, UL.



Transport, storage and disposal

3. Transport, storage and disposal

The i-CON 1 are each delivered in a stable box enclosure. Only use the original packaging for transport and interim storage of the systems. Do not move jerky or drop the i-CON 1. The i-CON 1 must be protected from weather influences such as rain, fog, sea air, etc. If the units will be stored for a longer period of time under humid conditions, then the i-CON 1 must be packed air-tight with desiccating agents in the enclosure. Damages due to improper transport and storage are not covered by the guarantee.



Disposal Notice in accordance with directive 2012/19/EC of the European Parliament and the council of July 4, 2012 on Waste Electrical and Electronic Equipment (WEEE).

Products labelled with the symbol of the crossed out wheeled bin must not be disposed of with unsorted municipal waste. For this purpose, the local authorities have set up collecting points. Please ask your municipality which possibilities are offered for the separate collection of WEEE. This way, you make your contribution to the reuse or other forms of use of WEEE to protect our environment and health.

UK CA

UK Importer:

Blundell Production Equipment Ltd., Unit C-D, Quinn Close Seven Stars Industrial Estate, Coventry CV3 4LH, England Tel. +44 2476 210 270, Fax. +44 2476 210 280 e-mail: sales@blundell.co.uk, www.blundell.co.uk



Commissioning

4. Commissioning

4.1 Before starting operation

Please check the contents of the packaging for completeness. For more information read the chapter on [Replacement parts, accessories]! Should the listed components be damaged or incomplete, then please contact your supplier.

The package consists of:

- Electronic station i-CON 1 ①
- Soldering iron i-TOOL with soldering tip (2)
- Storage stand with drying sponge ③
- · Power supply cord
- Operating Instructions


Should the listed components be damaged, then please contact your supplier.





Commissioning


4.2 Switching on for the first time

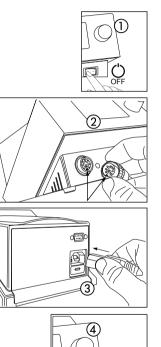

ON

Be sure to do the following to ensure the safe and long-lasting operation of the soldering tool:


- Check whether the supply voltage matches the value stated on the rating plate.
- Switch off the soldering station with the power switch ().
- Check the right fit of the soldering tip.
- Connect the soldering tool with the control station ② and put the soldering iron in the holder.
- Connect the power cable to the network supply socket ③.
- Switch on the soldering station ④.






5. Functional description

5.1 Operation



The soldering station is controlled via a rotary encoder ② with pushbutton function. It is called i-OP. The i-OP makes it possible to select desired functions or to change values. Clockwise turning results in higher values and counter-clockwise turning in lower values. Slow turning effects change in increments of one. Quick turning changes the selected values in increments of 10/50/100 (depending on the corresponding parameter).

The i-OP has an additional pushbutton function. Via this pushbutton function (pushing), the selected parameters and values are confirmed and become effective for the station. All setting steps and measured values are displayed in plain text in a clearly structured display window, which is simply referred to as "Display".





5.2 The Work mode





After the station has been switched on, the switch-on dialog is displayed for approx. 2 seconds. This dialog shows the station name ① and the software version ② of the i-CON 1. The station will then automatically change to work mode with the parameters:

- actual value ③
- set value and possibly standby status ④
- connected soldering tool (i-TOOL in our example) (5)
- password lock active (KEY-symbol) 6

In the work mode, the soldering tip temperature can be directly changed by turning the i-OP. Confirm this by pushing the i-OP. Read more about this in the section - [Working with two fixed temperatures].



If the password lock is activated, the set value can only be changed via the parameter mode. The password is needed.

For service purposes the number of the software may be of help, you should therefore make a note of it and keep it ready, as you may need it when asked by our Service Department.



5.2.1 Setting temperature setting of the optional heating plate

This function can only be vouched for when the soldering station is equipped with a serial interface (option). You can then use the soldering station to control the infrared heating plate of the 0IRHP100A rework system. Read more on this in the section [Configuration Mode].



Click the i-OP 3-times one after the other in the working mode. The adjoining display appears.

Set the desired temperature setting between [0] and [6] by turning the i-OP.

The heating plate can be operated with 6 temperature settings. Setting [0]: the heating plate is witched off; Setting [1]: lowest heat output; Setting [6] maximum heat output. The factory setting is [0].

When the desired temperature setting appears, press the i-OP to select the temperature setting.



5.2.2 Working with the optional heating plate

The heating plate is switched on as follows:

- With the function [Heating plate] activated, you can switch on the heating plate in the working mode by double-clicking the i-OP.
- The ① window appears for 2 seconds. The ② symbol signals that fact that the heating plate is working. The ③ display shows the set temperature setting.

The heating plate is switched off as follows:

Double-click the i-OP to switch off the heating plate.

The temperature setting is changed as follows in the working mode:

- Double-click the i-OP to switch off the heating plate.
- The ① window appears.
- Press the i-OP again. Select the desired temperature setting by turning the i-OP. Press the i-OP again to accept the set value.
- The heating plate now operates with the set temperature setting.
 - Placing the soldering station in the idle state has the effect of also switching off the heating plate. The fact of the soldering station being taken out of the idle state does not automatically switch on the heating plate. You have to manually switch it on by double-clicking the i-OP. Read more about this in the section [Adjustable shut-down function].






5.2.2.1 Output values of the heating plate

To stop the heating plate overheating, the maximum temperature is limited to 300 $^{\circ}\text{C}$ (Temperature setting 6).

The following characteristic shows the end temperatures of the heating plate at the various temperature settings.

- Horizontal (x): set temperature setting
- · Vertical (T): temperature after 10 minutes of heating

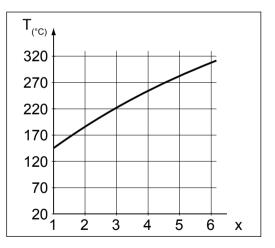



5.2.3 Working with two fixed temperatures (nominal temperatures)

This function allows you to save two fixed temperatures in the soldering station. When required, these temperatures can be easily and rapidly retrieved. Read through the [Configuration Mode] section on how to activate this function. Read through the [Parameter Mode] section on how to set the temperatures. Once you have carried out these two steps, then you can change between the set temperatures.

> Two temperature values then appear in the left-hand half of the display in the working mode.



OK)

i-Tool

8556 3756

Select the desired temperature by pressing the i-OP.

The momentarily set temperature is shown on the display with a light background. When the set temperature is obtained, [OK] appears in the lower section of the display





5.3 Parameter mode

The following settings can be made in parameter mode:

- Nominal temperature (150 450 °C / 302 842 °F)
- Calibration temperature (-70...+50 °C / -126...+90 °F)
- Tip offset (without function)
- Energy function (3 stages)
- Standby-Time (0 60 min)
- Standby-Temperature (150 300 °C).

Please proceed as follows to activate the parameter mode:

Press the i-OP and keep pressed for 2 seconds.

The parameter mode is now activated. The desired parameter is selected by turning on the i-OP.

For the selected parameter (1), a help text (2) is displayed in the last line which gives additional explanations or numerical ranges.





Proceed as follows in order to change a parameter value:

- Press the i-OP and keep it pressed for 2 seconds to open the parameter mode.
- Select the desired parameter by turning the i-OP.
- Press the i-OP to activate the cursor, pressing the i-OP subsequently de-activates the cursor.

With the cursor activated, turning the i-OP accordingly changes the value of the parameter.











With the i-SET TOOL (option) it is possible to save the settings (including password) of the station. Also you can write back the saved settings into the station. This way, the basic settings can be transferred quickly to several soldering stations. Please observe the i-SET TOOL's manual for this purpose. How to use the i-SET TOOL:

- Disconnect the soldering tool from the soldering station and connect the i-SET TOOL.
- Turn the i-OP and select the following: Upload: The data of the station is written into the i-SET TOOL. Download: The data of the i-SET TOOL is written into the station. Then, push the i-OP.

A confirmation prompt is displayed:

- Select [Abort] to end the process or [>>>] to continue.
- Push the i-OP; the settings will be saved. Wait until the text [Parameter saved] is displayed. Then, remove the i-SET TOOL.



i-SET TOOL

Display contrast, calibration and offset are not transferred. When transferring data to the soldering station, the parameters for all soldering tools will be overwritten. Take note of this when you operate different soldering tools at your soldering stations.

Even though the soldering station is equipped with a serial interface (option), the device number of the station is not transmitted. Read more on this in the Section [Device number]



5.3.2 Set temperature



The set temperature is the desired soldering tip temperature.



In the work mode, the soldering tip temperature can be directly changed by turning the i-OP. Confirm this by pushing the i-OP.



5.3.2.1 Setting two nominal temperatures (fixed temperatures)

You can set a second nominal temperature.

- Activating the [Fixed temperature] function in the [Configuration) mode is followed by two temperature values appearing in the left-hand half of the display in the working mode.
- Select the desired temperature by pressing the i-OP.
- Press the i-OP and keep it pressed for 2 seconds to open the parameter mode.
- Select the [Nominal temp.] parameter by turning the i-OP.
- Activate the cursor by pressing the i-OP, set the desired temperature.
- End the parameter mode. You have now set the first fixed temperature.
- Select the second temperature by pressing the i-OP in the working mode and set in the parameter mode as described above.

3BA00268-1 • Rev. 1



5.3.3 Calibration temperature

Parameter				
** E_N I	0 糕。。			
Calibrate Tip-Offset	+000 C			
Tip-Offset	01			
ADJUST TIP-TEMP	-70/125+50/50			

Use this function to calibrate the soldering tip temperature. It makes it possible to adjust the display value and actual tip temperature. The adjustable calibration range is -70...+50 °C / -126...+90 °F.

A description is given in Chapter [i-CON 1 Calibrating] on how to exactly proceed with the calibration.



If you do not have a corresponding measuring unit for this measurement, please enter "0" into this parameter field.

5.3.4 Tip offset



Without function.

5.3.5 i-CON 1 Calibrating



By using the calibrating temperature, the actual tip temperature is brought into exact conformity with the temperature displayed. Read more on this in the Section [Calibrating temperature]. The following procedure must be adhered to when undertaking calibration:

- Entering the desired nominal temperature [Nominal temperature] chapter.
- Setting the calibrating temperature [Establishing calibrating temperature] chapter.




5.3.6 Calibration temperature



- Determine the soldering tip temperature with a calibrated measuring device (e.g. Ersa DTM 110).
- Compare the two displayed values of i-CON 1 and the measuring device.
- Calculate the temperature difference: $\Delta T = T_{i-CON 1} T_{measuring device}$
- Set the calculated temperature difference ∆T (with algebraic sign via the rotary motion at the i-OP) in the menu item [Calibrate].

Quiet air conditions are important for the prevention of measurement errors.

5.3.7 Power Level

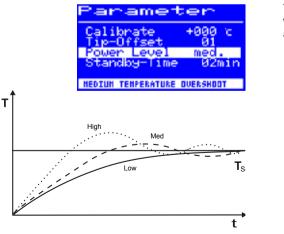

This function enables the user to influence the regulating behavior of the station, whereby the heating and after heating behavior of the station can be matched to the actual application. Three settings are possible: [high], [med.] and [low].

- [Low]: Minimum post-heating characteristics. For soldering works with low heat demand.
- [Med.]: Increased post-heating characteristics. For soldering works with increased heat demand.
- [High]: Maximum post-heating characteristics. For soldering works with very high heat demand.





5.3.8 Standby-Time

The standby period is the time from the last work with the soldering tool to the point when the standby temperature is activated. The setting range is between 20 seconds and 60 minutes. The input [0] deactivates the standby function.



For small soldering points or soldering works which are performed with very little motion, a sufficiently high standby-time should be selected. Otherwise the standby-function may lower the temperature already during the soldering process!

As a measure to save energy and to prolong the lifetime of soldering tip and heater you can automatically trigger an idle state for the soldering tool. Please read section [Adjustable shut-down function (idle state)].

5.3.9 Standby-Temperature

Parameter			
Power Level Standby-Tir	l med. ne 02min		
Standby-Ter	np 250 c		
TEMPERATUR 15	0-300C/300-575F		

This is the soldering tip temperature during work breaks. It is automatically activated when the standby-time has elapsed. When the temperature is decreased, power is saved and the service life of tip and heating element is increased.



Reheating to standby temperature is accomplished either by moving the i-TOOL or by pressing / turning on the i-OP.




5.4 Configuration mode

Configuration				
CHANGE	ABORT	DEFAULT		

In the configuration mode, the following settings are possible:

- Temperature window (monitoring)
- Device number
- process alarm (acoustic temp. monitoring)
- Idle state
- Password
- Temperature unit
- · Activating the heating plate
- · Activating the second fixed temperature
- Language selection of the station

To reach the configuration mode, keep the i-OP pushed for 2 seconds when you switch on the i-CON 1.

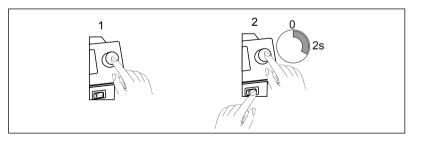



- turn the i-OP to select the menu option, then press:
- [CHANGE] opens the menu [Configuration]
- [ABORT] aborts the process
- [DEFAULT] restores the factory settings.

If the password lock is active, the soldering station cannot be reset to its delivery status (default) without the password.

5.4.1 Temperature window

(i)



For the connected soldering tool a temperature window with an upper and lower range can be defined.

If the actual temperature is within this window, the work dialog displays an "OK".

Factory setting: ±20 °C (68 °F).

5.4.2 Process alarm

Configuration ↑ Tempwindow 020 c ↓ Tempwindow 020 c Process alarm off Password ***** PROZESS HINDOW ALARH Without function.





5.4.3 Password lock

The data of the station can be protected by a 4-digit password (0001-9999). This way, settings/changes can be prevented. The station does not come with activated password lock; this is indicated by "0000" in the password input field.

The symbol signalizes that the station is protected. Factory setting: [0000] = unlocked.



Please memorize your selected password thoroughly or note it down at a safe spot. Only Ersa can deactivate a forgotten password. If you have an i-SET TOOL with the saved factory settings, you can also unlock the station on your own.

5.4.3.1 Setting the password

Configuration			
Process alarm Password	off		
Unit Language	С ЕN		
PASSHORD LOCK IS A	CTIVE !		

Proceed as follows in order to activate the [password] function:

- Open the configuration mode, select the [change] item.
- Activate the [Password] function via turning the i-OP.
- Press the i-OP to activate the cursor, pressing the i-OP subsequently de-activates the cursor.



If the cursor is activated, the value of the parameter is changed accordingly when the i-OP is turned.

Enter the desired password (number between "0001" and "9999") by turning the i-OP: Clockwise up, counter-clockwise down.





 Confirm your input by pushing the i-OP. The first [Password activation] image is displayed:

Select the [ABORT] item to quit the process. The password lock will not be activated in this case.

Note down the adjusted password, select the [>>>] item (continue), confirm by pushing the i-OP.

The second [Password activation] image is displayed:

Enter your password again and Confirm your input by pushing the i-OP.



The [Configuration] image with the message [PASSWORD LOCK IS ACTIVE!] is displayed. The station is now protected.

Configuration				
Process alarm off Password ######				
Unit	C EN			
Language	EN			
PASSNORD LOCK IS	ACTIVE !			

Password activation!

REPEAT NEW PASSHORD

PASSHORD - CONFIRMATION XX

6666



5.4.3.2 Changing the password



The password is set in the configuration mode. If a password has already been set, the code is displayed as asterisk.

If the user wants to change a password, the active password lock must first be revoked by entering the current password.

After the correct input, the new password can be set. If the numerical entry has been completed with the PUSH-function, a note is displayed indicating that the password lock is activated. The purpose of this note is to once more indicate the significance of this function to the operator. If the function is canceled, the previous state is maintained.

If the operator continues the dialog [>>>], the password must be repeated for activation.

If the password has been repeated correctly, the station is protected by the code. If the code has been entered incorrectly, a note is displayed and the previous state is maintained.

The symbol (1) signalizes that the station is protected.

5.4.3.3 Input of values without deactivating the password



If values are to be changed, e.g. set value, without a deactivation of the password, a request to enter the password is issued when the value is tried to be changed. If the correct password is entered, the operator has approx. 30 sec. of time to perform his changes. If he performs settings during this time limit, the time limit will be extended by another 30 s each time. This way, further settings can be performed. If no input is carried out for 30 s, the password lock will be re-activated.



5.4.3.4 Forgotten password

If you have forgotten your password, it can only be de-activated by Ersa Service. In such a case, please refer to the company Ersa, indicating your address, name, invoice and serial number of the soldering station (see type plate). The password lock may also be de-activated with the i-SET TOOL. Please observe the corresponding hint at section [Password lock] to this purpose!

5.4.4 Temperature unit

Configuration	
Process alarm	off
Password	****
Unit	с
Language	ЕN
CHANGE TEMPERATURE	-UNIT

Here, the desired temperature unit, degree Celsius (°C) or Fahrenheit (°F), can be selected. Factory setting: "°C"



Caution! When the temperature unit is changed, a setup mode is carried out. During this time (approx. 5 sec.), the station must not be switched off.

5.4.5 Language selection

Configuration	1	
Password Unit	**** C	
Language	EN XXXX	
CHANGE LANGUAGE		

Here, the desired language for the menu navigation of the i-CON 1 can be selected. Factory setting: "English".



Configuration	
Unit Language Shut Down Unit number	EN Blomin 01
ACTIVE IN 10-240	HID



5.4.6 Adjustable shut-down function (idle state)

The adjustable shut-down function (idle state) serves the purpose of energy saving and prolonging the lifetime of soldering tip and heater. In idle state the tools cool down to room temperature. The bottom line in the display then shows the text [Shut Down]. You can end the idle state at any time by actuating the i-OP.

Please proceed as follows to activate the function [Shut Down]:

- Open the configuration mode and choose the option [Shut Down].
- Activate the menu [Shut Down] by turning the i-OP.
- Press the i-OP to activate the cursor, press the i-OP again de-activates the cursor
- Enter the desired time from [010] to [240] minutes by turning the i-OP accordingly. The input [000] deactivates the function [Shut Down].

If the cursor is activated, turning the i-OP changes the value of the parameter accordingly. The set time starts to run, only after the tool is in [Standby]. If the tool is still not used during this time, idle state is activated after this time has expired.

The standby condition is automatically terminated when the soldering tool is taken out of the storage stand or when the i-OP is operated.

A controlled heating plate is not automatically activated! Find out more about this in the section [Working mode].



5.4.7 Device number

Configuration		
Langu Shut	lage Down	EN 010min
Unit	E N D	01 \$85
RANGE OF ADJUSTMENT 1-32		

This function is only required, if the i-CON 1 is equipped with a serial interface (Option). An unambiguous device number must be assigned for identification, to enable the PC to correctly allocate the connected station.

Please proceed as follows to set the [Unit number]:

- Open the configuration mode and choose the option [Unit number].
- Activate the menu [Unit number] by turning the i-OP.
- Press the i-OP to activate the cursor, press the i-OP again de-activates the cursor.
- Enter the desired number from [01] to [32] by turning the i-OP accordingly.

Ĵ

If the cursor is activated, turning the i-OP changes the value of the parameter accordingly. Details for correct assignment of device numbers can be found in the documentation for the serial interface. Each station must have its own number. A double assignment of a number is not unambiguous and can lead to malfunction.



5.4.8 Heating plate (option)

This function can only be vouched for when the soldering station is equipped with a serial interface (Option). You can then use the soldering station to control the infrared heating plate 0IRHP100A (0IRHP100A-03) of the rework system.

The following accessories are needed:

- Control cable from soldering station to 0IRHP100A
- Y-control cables given that the soldering smoke extractor and the 0IRHP100A are to be controlled together.

5.4.8.1 Connecting heating plate to soldering station

- Connect the control cable with the soldering station control cable.
- Switch on the rework system.

5.4.8.2 Activating the heating plate



- Select the menu [Heating plate] in the configuration mode by turning the i-OP.
- Activate the cursor by pressing the i-OP.
- Activate the function by turning the i-OP. The adjoining display appears.
- Terminate the configuration menu.

Information on working with the heating plate can be found in the chapter [Working mode].



5.4.9 Two fixed temperatures


This function allows you to determine two soldering tip temperatures and save them in the soldering station. You can retrieve these temperatures at any time.

5.4.9.1 Activating function



- Select the menu [Fixed temperature] in the configuration mode by turning the i-OP.
- Activate the cursor by pressing the i-OP.
- Activate the function by turning the i-OP. The adjoining display appears.
- Terminate the configuration menu.

Information on working with two fixed temperatures can be found in the chapter [Working mode].





5.5 Factory settings ("default")

The following lists shows the settings with which the station was programmed in our works. These settings can be restored via the "default function" in the "Configuration" mode. The only exception is the setting of the password which is not deleted via the default function.

Configuration mode				
Parameter	Settings			
↑ Tempwindow	20 °C			
↓ Tempwindow	20 °C			
Shut down	000			
Unit number	01			
Heating plate	0			
Process alarm	Off			
Password	0000 (is not deleted via the default function)			
Unit	٦°			
Language	EN			


Parameter mode			
Parameter	Settings		
Tempset (°C)	360		
Calibrate (°C)	0		
Tip-Offset	1		
Power level	Medium		
Standby-Time (min)	5		
Standby-Temp (°C/°F)	250		





Follow these steps to adjust the contrast of the display to the respective work environment:

Switch on the station and rotate the i-OP immediately. This activates the [Contrast] mode.

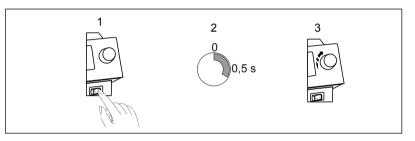

- Adjust the desired contrast by turning the i-OP.
- Confirm your input by pushing the i-OP.



5.7 Replacing the soldering tip

Replace the soldering tip when it is worn.


- To prevent any material damage due to overheating, switch off the heating element or the soldering station before each soldering tip replacement!
- To prevent any material damage due to overheating, never operate the soldering iron without the soldering tip!




Attention! Burn hazard! After switching off, the soldering tip remains hot for a long time! Always touch only the knurled plastic part

When the tip has cooled off, proceed as follows:


Unlock ① and pull off ② the soldering tip.

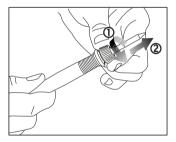


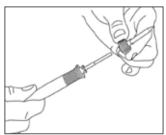

Remove the soldering tip.



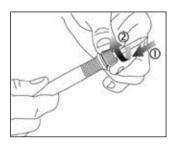



Fit the soldering tip ①, overcome the spring force and lock the bayonet mount [2].

To check the soldering tip for tight seating:

Keep a correct distance between the knurled sleeve (2) and the soldering iron (3), as shown in figure on the left.

The bayonet mount of the knurled sleeve is completely locked.

The display panels (1) do not touch the knurled sleeve (2).



5.8 Changing the Heating Element




Attention! Burn hazard!

Only change the heating element when both the soldering tip and the heating element are cold!

Before changing the heating element, switch off the soldering station and allow the soldering tip and the heating element to cool down!

- Remove the soldering tip.
- Pull the heating element out by hand.
- Slide in the spare heating element.
- Align the groove of the heating element ① with the marking in the soldering iron ②.
- Align the heating element exactly parallel to the soldering iron.
- Gently push the heating element in carefully and slowly until it stops. If the heating element cannot slide in easily, do not press with greater force, but reposition it!
- Re-install the soldering tip.

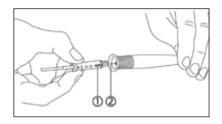




5.9 Sensitive components

Many components may be damaged by electrostatic discharge (please observe the warnings on the packaging or ask the manufacturer or supplier). These components can be protected by an ESD-secure workplace (ESD = electrostatic discharge). The soldering station can be easily integrated into such an environment. The soldering tip can be connected at high resistance (220 k Ω) to the conductive workbase via the potential equalization jack (1).

The soldering station has complete antistatic protection and also meets the requirements of the American military standard.

The soldering tips are default hard grounded.

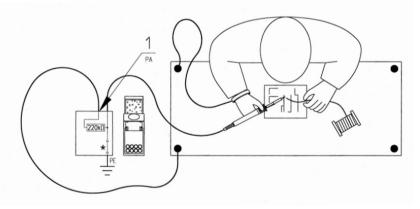

*Hard grounded in accordance with military and ESA standard.



Error diagnosis and remedy

6. Error diagnosis and remedy

If the soldering station does not operate as expected, check the following items:

- Is main voltage present? Correctly connect the mains lead to the device and socket.
- Is the fuse defect? The fuse can be found at the rear side of the device in the mains connecting socket.
- Note that a defective fuse may also indicate a deeper cause of error. Simply changing the fuse therefore generally does not suffice.
- · Is the soldering tool correctly connected to the supply unit?
- The station permanently only displays the room temperature. This indicates a fault on the heater or in the supply line.

If the station is in idle state, the room temperature will also be displayed after a few minutes!

• The display is switched off and no longer displays anything, but the mains switch continues to be illuminated. In this case, the soldering station is overloaded. Once the soldering station has cooled down sufficiently (approx. 30 minutes), work can be continued.





Error diagnosis and remedy

6.1 Error Messages



The i-CON 1 carries out an automatic error diagnosis. The result of a diagnosis is displayed as an error code: The triangular pictograph ① appears in the display of the soldering station. The error code ② is displayed as a number between 2 and 99. Additionally, an information text ③ is displayed in the bottom line. The error codes are listed in the following table. Error messages have to be confirmed with the i-OP. After the error has been eliminated and the error message has been confirmed, the connected soldering tool will be heated again.

Code	Test in display	Cause	Remedy
2	[CALIBRATION FATAL ERROR !]	Station no longer calibrated	Have factory calibration carried out
4	[RT-compensation]	Measurement reading of KTY not ok	Have soldering tool and soldering station checked
7	[HE MISSING ? SENSOR ?]	Heating element is not installed correctly / Thermocouple error	Install heating element correctly/ Have soldering tool checked
8	[HEAT ELEMENT?]	Heater defect	Check heating element / Check soldering station
9	[DATA LOST!]	Parameter / Configuration data destroyed	Reset soldering station to factory setting in the con- figuration mode
71	[iTOOL AND HE DE- FECTIVE/EXCHANGE]	Both the electronics and the heating element of the i-TOOL are defective.	Replace the i-TOOL
98	[MAINS FREQUENCY ERROR]	Mains frequency outside of frequency range (± 10%)	-
99	[ICON OVERLOAD PROTECTION]	Soldering station over- loaded	Allow the soldering station to cool down



Maintenance

7. Maintenance

7.1 Important care jobs

To ensure a long service life of your station, a few points must be observed.

- Make sure that the soldering and desoldering tip is always tinned. A soldering tip which is always clean will become passive within a short time. If you always leave a small amount of solder at the soldering tip when you stop soldering, the service life increases substantially.
- If necessary wipe the soldering tip only just before the start of the soldering process.
- To obtain good electrical and thermal conductivity, occasionally remove the soldering tip and clean the heating element shaft with a brass brush.
- Make sure that the effectiveness of the ventilation holes is not impaired by a build-up of dust.

()

There are no parts to be maintained within the device!

Only use genuine Ersa consumables and spare parts to ensure reliable functionality and warranty!

7.2 Cleaning

Occasionally clean the device with a moistened soft cloth. Steam cleaners, pressure washers, scrubbing sponges, abrasives, solvents like alcohol or benzine must not be used!



8. Replacement parts, accessories

	Description	Order-no.			
Soldering stations	Soldering stations				
	i-CON 1 electronic station, 80 W, anti- static, compl. with 1 i-TOOL soldering iron and holder	0IC1105A			
Single parts					
	i-CON 1 electronic station, 230/24 V, 80 W, antistatic	0IC1135A			
9	i-TOOL soldering iron, 24 V, 150 W antistatic with tip 0102CDLF16	0105CDJ			
	Holder for i-TOOL	0A59			
	i-SET TOOL	0103IST			
	Heating element for i-TOOL	016100J			



Replacement parts, accessories

	Description	Order-no.
	Viscose sponge for holder	0003B
-	Brass brush	3ZT00051
	Drying sponge	0008M
C	i-CON control cable to the heating plate	0IRHP100A-14
V	Y control cable for simultaneous con- nection of heating plate and soldering smoke extractor	0IRHP100A-15



Replacement parts, accessories

8.1 Soldering tips of Series 142



To open the list of all soldering tips included in the 142 series, use the Internet quick link **142.ersa.com**.



Warranty

9. Warranty

Heating elements and soldering or desoldering tips are treated as wearing parts, and are therefore not subject to the warranty. Any return of goods must be accompanied by a written description of the material or construction fault that has occurred as well as a confirmed purchase invoice.

Ersa created these operating instructions with careful attention to detail. However, no warranty can be given covering content, completeness and quality of specifications in this manual. The content is continuously maintained and modified to the current conditions.

All data published in this manual, including specifications concerning products and procedures, was determined by us to the best of our knowledge and ability, and using the most modern technical aids. These specifications are non-binding and for information only; they do not relieve the user from the responsibility of carrying out his own check before operation of the device. We are not liable for violations of patent rights of third parties for usage and procedures without previous express and written confirmation.

We reserve the right for technical modifications with the intention of improving the product. In the context of the legal possibilities, liability for any damage, including direct and indirect damage, which results from the acquisition of this product, is ruled out.

All rights are reserved. This manual, or any parts thereof, may not be transferred, modified, reproduced, or translated into another language without the written permission of Ersa GmbH.

ERSA GmbH • Leonhard-Karl-Str. 24 • 97877 Wertheim / Germany Tel. +49 (0) 9342 / 800-0 • Fax -127 e-mail: service.tools@ersa.de www.ersa.com

